


**DRILL DRIVER  
 ATTACHMENT OPERATION**

Effective 12/04/07

**Use on Atwood® MANUAL Ball Screw Truck Camper Jacks ONLY**

For complete Acme & Ball Screw Truck Camper Jacks instructions, consult MPD 87903.  
 Refer to the operation manual which accompanied your drill.

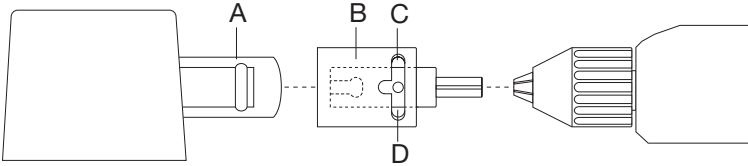

**TO APPLY THE DRILL DRIVER ATTACHMENT**

Insert drill driver attachment securely into the drill. Push adapter onto drive shaft of jack and rotate slightly until drive pin is engaged in adapter slot. Depress and hold in release bar (A) with black collar of adapter (B) with pressure from drill before attempting to rotate drill. Rotate black collar of drill adapter (B) to position pin at (C) to raise camper or (D) to lower camper.

**RAISE OR LOWER CAMPER - Follow instructions in MPD 87903.** Rotate drill clockwise to raise camper or counterclockwise to lower camper. Stop drill rotation before releasing inward pressure on release bar. Remove adapter from jack.

**CAUTION**

**PERSONAL INJURY/PRODUCT DAMAGE**


- Do not use pneumatic tool to run drill adapter.
- Battery operated drills, 9.6V to 18V, are powerful. Hold drill with both hands. Keep loose clothing and body parts away from drill as the reaction torque from the drill may cause it to kick back.
- Failure to stop rotation of drill before releasing inward pressure on release bar could damage jack.
- Refer to your drill manufacturer's operation manual.

**DRILL DRIVER  
 ATTACHMENT OPERATION**

Effective 12/04/07

**Use on Atwood® MANUAL Ball Screw Truck Camper Jacks ONLY**

For complete Acme & Ball Screw Truck Camper Jacks instructions, consult MPD 87903.  
 Refer to the operation manual which accompanied your drill.

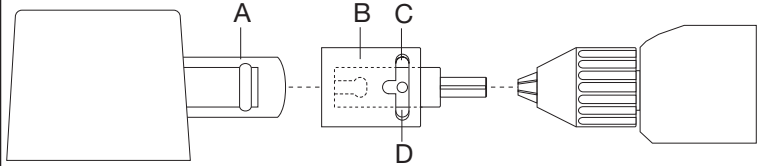

**TO APPLY THE DRILL DRIVER ATTACHMENT**

Insert drill driver attachment securely into the drill. Push adapter onto drive shaft of jack and rotate slightly until drive pin is engaged in adapter slot. Depress and hold in release bar (A) with black collar of adapter (B) with pressure from drill before attempting to rotate drill. Rotate black collar of drill adapter (B) to position pin at (C) to raise camper or (D) to lower camper.

**RAISE OR LOWER CAMPER - Follow instructions in MPD 87903.** Rotate drill clockwise to raise camper or counterclockwise to lower camper. Stop drill rotation before releasing inward pressure on release bar. Remove adapter from jack.

**CAUTION**

**PERSONAL INJURY/PRODUCT DAMAGE**


- Do not use pneumatic tool to run drill adapter.
- Battery operated drills, 9.6V to 18V, are powerful. Hold drill with both hands. Keep loose clothing and body parts away from drill as the reaction torque from the drill may cause it to kick back.
- Failure to stop rotation of drill before releasing inward pressure on release bar could damage jack.
- Refer to your drill manufacturer's operation manual.

**DRILL DRIVER  
 ATTACHMENT OPERATION**

Effective 12/04/07

**Use on Atwood® MANUAL Ball Screw Truck Camper Jacks ONLY**

For complete Acme & Ball Screw Truck Camper Jacks instructions, consult MPD 87903.  
 Refer to the operation manual which accompanied your drill.

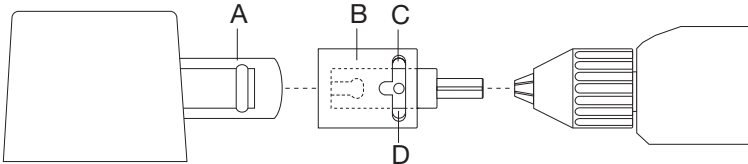

**TO APPLY THE DRILL DRIVER ATTACHMENT**

Insert drill driver attachment securely into the drill. Push adapter onto drive shaft of jack and rotate slightly until drive pin is engaged in adapter slot. Depress and hold in release bar (A) with black collar of adapter (B) with pressure from drill before attempting to rotate drill. Rotate black collar of drill adapter (B) to position pin at (C) to raise camper or (D) to lower camper.

**RAISE OR LOWER CAMPER - Follow instructions in MPD 87903.** Rotate drill clockwise to raise camper or counterclockwise to lower camper. Stop drill rotation before releasing inward pressure on release bar. Remove adapter from jack.

**CAUTION**

**PERSONAL INJURY/PRODUCT DAMAGE**


- Do not use pneumatic tool to run drill adapter.
- Battery operated drills, 9.6V to 18V, are powerful. Hold drill with both hands. Keep loose clothing and body parts away from drill as the reaction torque from the drill may cause it to kick back.
- Failure to stop rotation of drill before releasing inward pressure on release bar could damage jack.
- Refer to your drill manufacturer's operation manual.

**DRILL DRIVER  
 ATTACHMENT OPERATION**

Effective 12/04/07

**Use on Atwood® MANUAL Ball Screw Truck Camper Jacks ONLY**

For complete Acme & Ball Screw Truck Camper Jacks instructions, consult MPD 87903.  
 Refer to the operation manual which accompanied your drill.

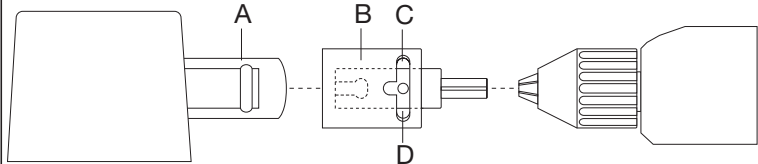

**TO APPLY THE DRILL DRIVER ATTACHMENT**

Insert drill driver attachment securely into the drill. Push adapter onto drive shaft of jack and rotate slightly until drive pin is engaged in adapter slot. Depress and hold in release bar (A) with black collar of adapter (B) with pressure from drill before attempting to rotate drill. Rotate black collar of drill adapter (B) to position pin at (C) to raise camper or (D) to lower camper.

**RAISE OR LOWER CAMPER - Follow instructions in MPD 87903.** Rotate drill clockwise to raise camper or counterclockwise to lower camper. Stop drill rotation before releasing inward pressure on release bar. Remove adapter from jack.

**CAUTION**

**PERSONAL INJURY/PRODUCT DAMAGE**

- Do not use pneumatic tool to run drill adapter.
- Battery operated drills, 9.6V to 18V, are powerful. Hold drill with both hands. Keep loose clothing and body parts away from drill as the reaction torque from the drill may cause it to kick back.
- Failure to stop rotation of drill before releasing inward pressure on release bar could damage jack.
- Refer to your drill manufacturer's operation manual.